

PbS near-infrared detector

Multi-Single-Pixel thin-film encapsulated

trinamiX

A brand of
BASF – We create chemistry

Features

- Wire-bonded on PCB
- Very high sensitivity
- Room temperature operation


Applications

- Spectroscopy
- Gas detection and analysis
- Flame monitoring
- Flame and spark detection
- Temperature measurement
- Moisture measurement
- Rapid prototyping

Electrical and optical characteristics per pixel

Type No.	Active area [mm x mm]	Peak responsivity S [V/W]	
		Typ.	Min.
PbS005005BC	0.5 x 0.5	$16 \cdot 10^5$	$10 \cdot 10^5$
PbS010010BC	1 x 1	$8 \cdot 10^5$	$5.6 \cdot 10^5$
PbS020020BC	2 x 2	$4 \cdot 10^5$	$2.8 \cdot 10^5$
PbS030030BC	3 x 3	$3 \cdot 10^5$	$1.8 \cdot 10^5$
PbS060060BC	6 x 6	$1.4 \cdot 10^5$	$0.9 \cdot 10^5$
PbS100100BC	10 x 10	$0.6 \cdot 10^5$	$0.4 \cdot 10^5$
PbS010050BC*	1 x 5	$3.5 \cdot 10^5$	$2 \cdot 10^5$

* Dark resistance R_D [M Ω] = 0.05 - 1

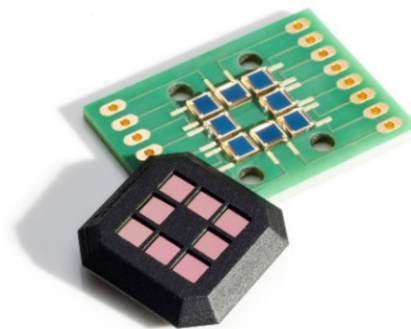

- Measured with 1550 nm LED, incident power 16 $\mu\text{W}/\text{cm}^2$
- Measured in a voltage divider circuit with 50 V/mm
- Photo responsivity and detectivity are measured with constant load resistance ($R_L = 1 \text{ M}\Omega$) and calculated for matched resistance

Element temperature [°C]	Peak wave-length λ_P [μm]	20% cut-off wavelength λ_C [μm]	Peak D* (620 Hz, 1 Hz) [$\text{cm}\cdot\text{Hz}^{1/2}/\text{W}$]		Time constant [μs]	Dark resistance R_D [M Ω]
	Typ.	Typ.	Typ.	Min.	Typ.	
22	2.7	2.9	$1 \cdot 10^{11}$	$0.8 \cdot 10^{11}$	200	0.3 - 3

Mechanical characteristics

- Number of lines 1 - 3
- Number of pixels 2 - 8
- Minimum pixel width 1000 μm
- Minimum pixel height 1000 μm

Please contact us for an individual design: info@hertzstueck.de

trinamiX GmbH
Industriestr. 35
67063 Ludwigshafen
Germany

Contact
W www.trinamix.de
E info@hertzstueck.de

Release Date: February 17th, 2020
ver. 1.6


PbS near-infrared detector

Multi-Single-Pixel thin-film encapsulated


trinamiX

A brand of
BASF – We create chemistry


Typical spectral response per pixel

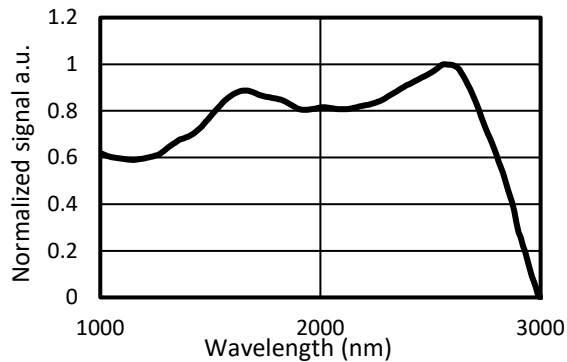

Typical frequency response per pixel

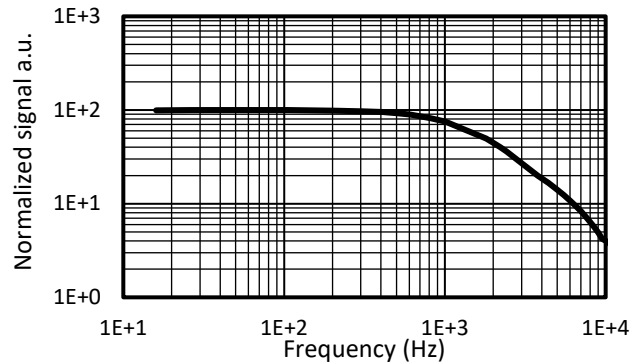

Typical resistance change over temperature

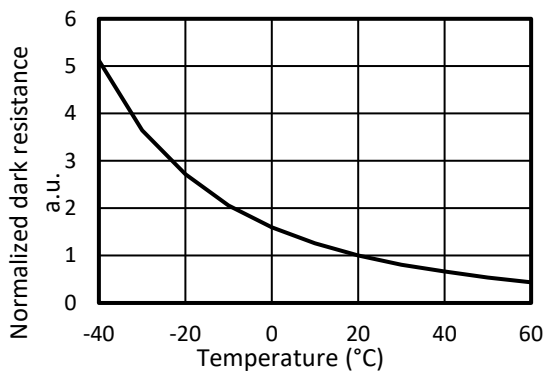

Options

- Individual housing
- Integrated filters
- Individual PCB
- Evaluation Kit available

Storage

- Storage temperature: -30°C to +70°C
- Exposure to UV light results in permanent damage
- Prevent exposure to UV and visible light

Handling

- Active area is scratch sensitive, protect top surface from any mechanical contact
- Ensure dust-free environment for device handling
- Operating temperature: -30°C to +70°C

PbS near-infrared detector

Multi-Single-Pixel thin-film encapsulated

trinamiX

A brand of
BASF – We create chemistry

Regulatory

For the use of Hertzstück™ PbS and PbSe infrared photodetectors in medical devices, monitoring and control instruments and consumer applications RoHS exemptions apply.

For automotive applications Hertzstück™ PbS and PbSe infrared photodetectors fall under ELV exemption.